



# UTStarcom XV6700 Camera Replacement

This guide will assist with installing a new camera.

Written By: Jesse Walker



## INTRODUCTION


A small amount of disassembly is required to replace the camera. The beginner can complete this task with just a couple tools.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [Tweezers](#) (1)
-



- Slide the battery cover down to remove.

## Step 3



- Pull the battery removal tab and lift out the battery.
- i** If the battery removal tab is missing, place a spudger on the opposite side of the highlighted connector and pry the battery up.


## Step 4 — Camera



- Remove the two 4.0-mm #000 Phillips screws at the top of the battery compartment. Tweezers may be useful to remove the screws.



## Step 5

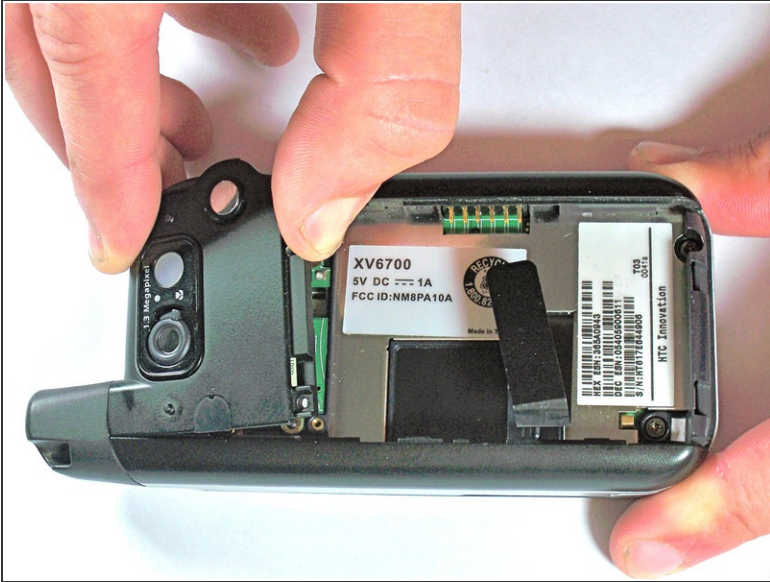


- Use firm pressure to carefully pry off the cover with your fingers.

## Step 6




- Remove the 4.0-mm #00 Phillips screw securing the camera flash circuit board. The board is still connected by a connector on the bottom of the board.

## Step 7

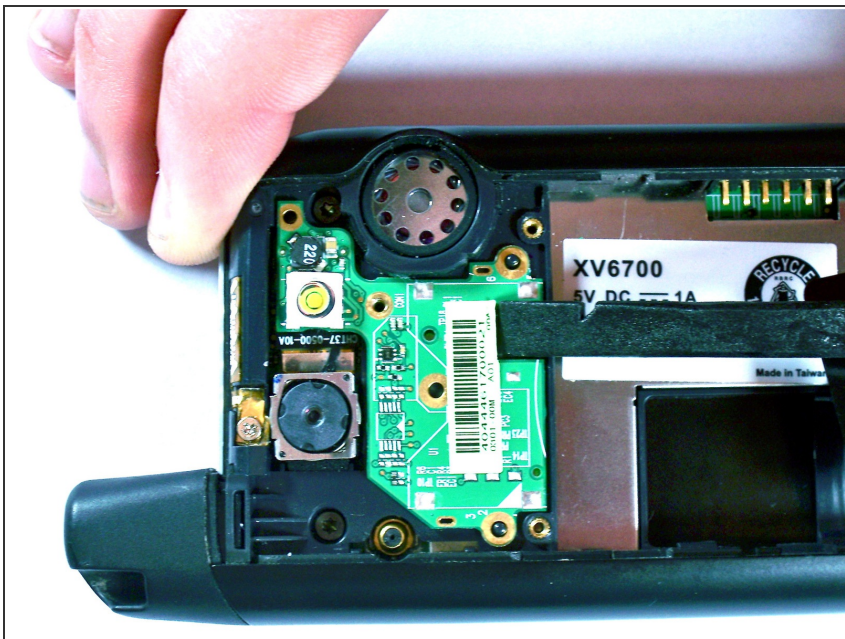

- Gently pry off the camera flash circuit board with the spudger.

## Step 8

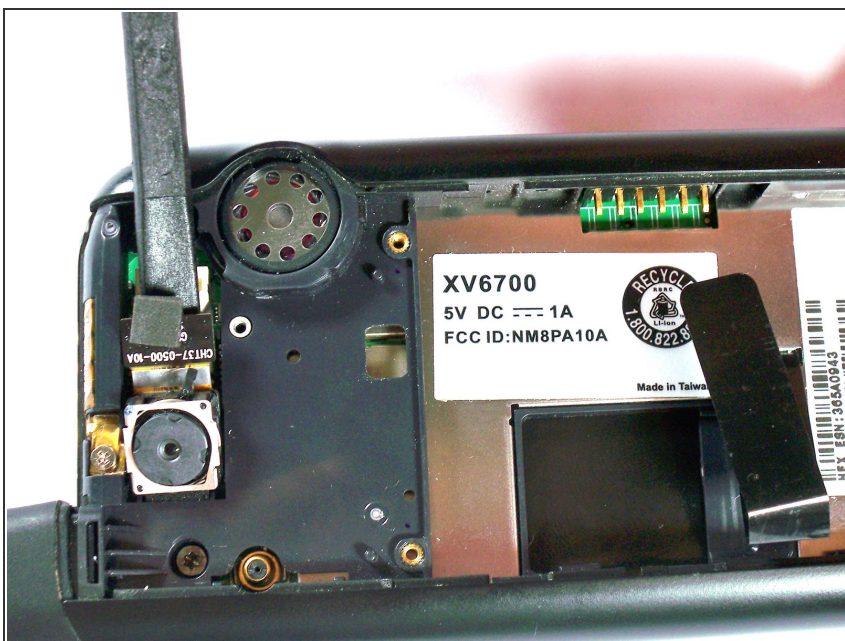

- Gently pry off the camera with the spudger.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 12:24:59 PM.